

Português:

Atenção – Siga a sequência de instrução de montagem que pode ver nas fotos.

Proteção radiador em alumínio e kit de componentes.

- **Foto A:** Retirar água do radiador e plásticos laterais da moto.
- **Foto B:** Aplicar o item Nº2 (Haste Alumínio – x2) na proteção R IN com o item Nº1 (Parafuso – x2).
- **Foto C:** Aplicar proteção R OUT com o item Nº1 (Parafuso – x2).
- **Foto D:** Montar persianas do radiador com parafuso de origem.
- **Foto E:** Montar plástico lateral direito.
- **Foto F:** Repetir o processo para o lado esquerdo como a instrução de montagem.

Recolocar a água no radiador e apertar todos os parafusos.


Français:

Attention - Suivez la séquence d'instructions d'assemblage comme vous pouvez voir sur les photos.

Protection de radiateur et kit de composants.

- **Photo A:** Retirez l'eau du radiateur et côté plastique de la moto.
- **Photo B:** Appliquer l'item Nº2 (Tige d'Aluminium – x2) en protection R IN avec l'item Nº1 (Vis – x2).
- **Photo C:** Monter protection R OUT avec l'item Nº1 (Vis – x2).
- **Photo D:** Monter persiennes du radiateur avec le vis d'origine.
- **Photo E:** Monter le plastique à droite sur la moto.
- **Photo F:** Répétez le processus sur le côté gauche comme instruction d'assemblage.


Remplacer l'eau dans le radiateur et serrer toutes les vis.

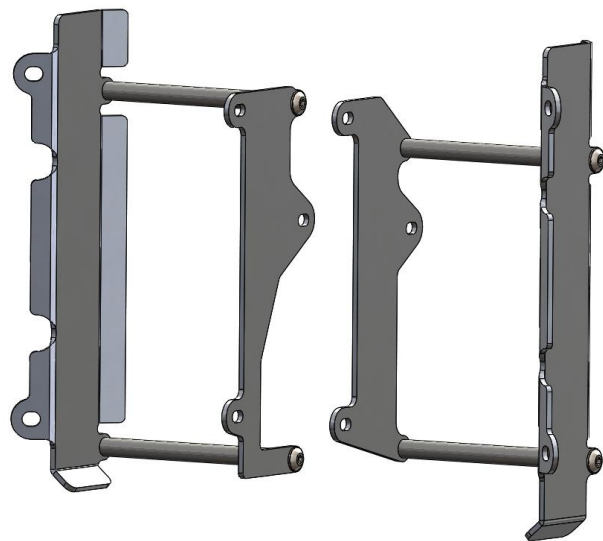

ALUMINUM RADIATOR GUARD

Ref.: 2CP0600222

ASSEMBLY INSTRUCTION / INSTRUÇÃO DE MONTAGEM

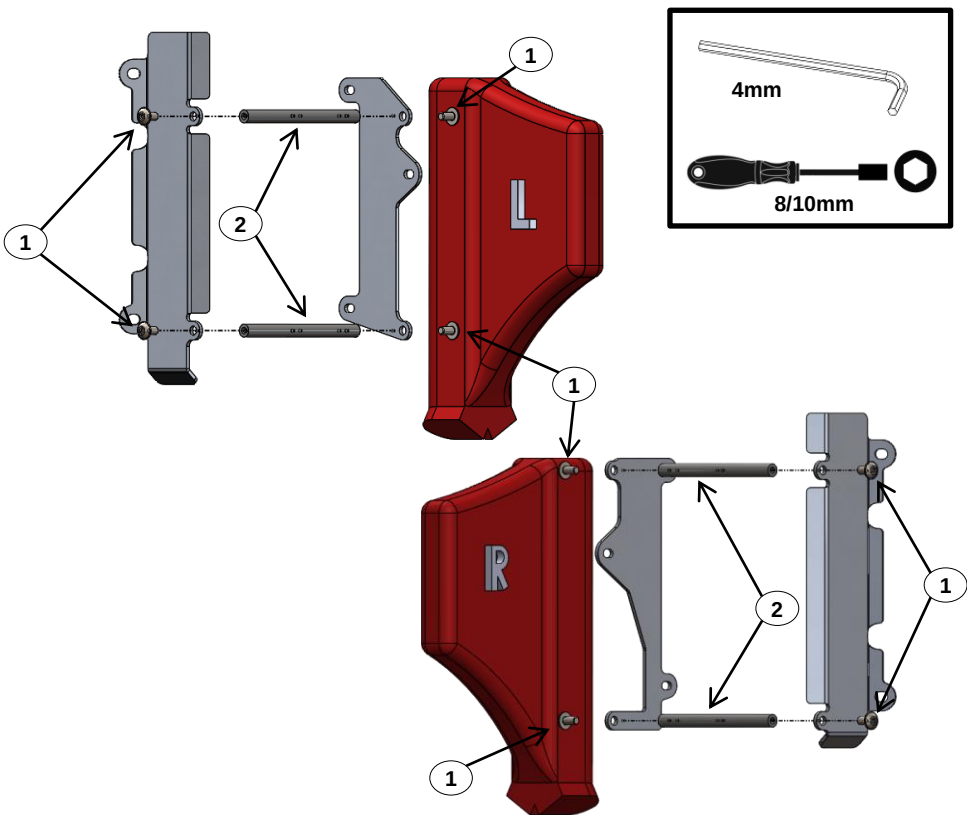

2	Haste Alumínio / Aluminum Rod	120mm	4
1	Paraf. Cabeça Redonda Sext. Int. c. FA / Screw Round Head With Washer False	M6x12 - ISO 7380	8
ITEM Nº: COMPONENTE (COMPONENT):		DESCRIÇÃO (DESCRIPTION):	QUANT.:
ACESSÓRIOS (ACCESSORIES)			

English:

Attention – Follow the assembly instruction sequence has you can see in the photos.

Aluminum radiator guard and kit of components.

- **Photo A:** Remove radiator water and side plastic.
 - **Photo B:** Apply item Nº2 (Aluminum Rod – x2) in R IN protection with item Nº1 (Screw – x2). Remove motorcycle radiator. Mount item previously assembled with motorcycle radiator use original screws.
 - **Photo C:** Mount R OUT protection with item Nº1 (Screw – x2).
 - **Photo D:** Mount radiator lovers with origin screw.
 - **Photo E:** Mount right side plastic.
 - **Photo F:** Repeat the process to the left side as assembly instruction.
- Replace water in radiator and tight all screws.

ALUMINUM RADIATOR GUARD

