

Português:

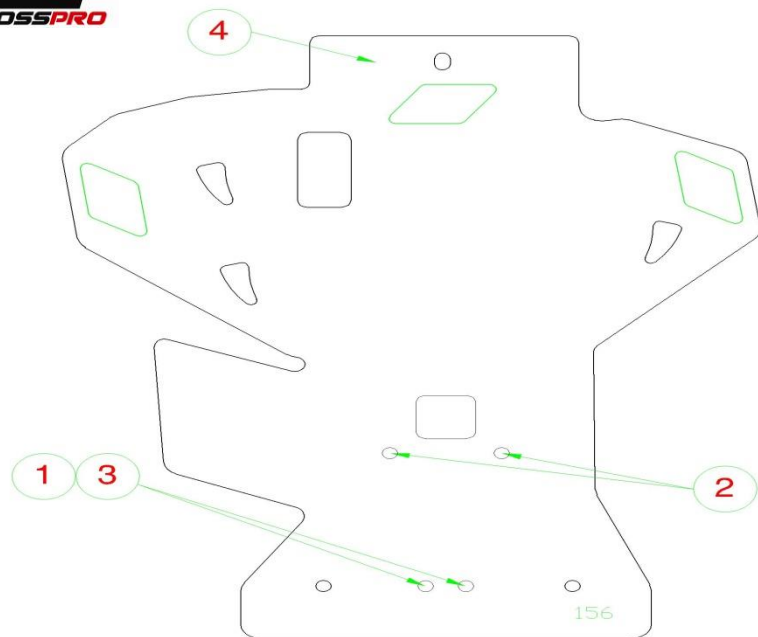
Atenção – Siga a sequência de instrução de montagem que pode ver nas fotos. Aplicar a Cápsula de Borracha na fixação em Inox, siga a instrução de montagem da Cápsula de Borracha.

- **1ª Foto:** Protecção de motor e kit de componentes
- **2ª Foto:** Aplique item N°3 na protecção usando item N°1, de seguida aplique item N°6 no item N°4 e depois coloque-o na parte da frente do quadro apertando com o item N°5.
- **3ª Foto:** Retire o sistema de escape da moto.
- **4ª Foto:** Aplique o item N°6 no item N°2 e em seguida na parte central do quadro
- **5ª Foto:** Coloque a protecção começando pela parte da frente de modo a passar primeiro na fixação do escape, depois ajuste as fixações traseira e do meio.
- **6ª Foto:** Recoloque o sistema de escape na moto.
- **7ª Foto:** Ajuste o parafuso da frente no item N°4.
- **8ª Foto:** Aperte todos os parafusos.



CROSSPRO
P R O T E C T I O N P A R T S



DTC Engine Guard EC
HUSQVARNA TE 250-300 2016
KTM XC 250-300 2016
Ref: 2CP0850156



ID.013.01

3		4		2		ASSEMBLY RUBBER CAP	
							
7	-	Rubber Cap / Cápsula de Borracha	-	2			
6	-	Clip Inox / Mola de Frizo	M 6	3			
5	-	Screw Round Head With Washer False / Paraf. Cabeça Redonda Sext. Int. c/ FA	M6 x 20 - ISO 7380	5			
4	-	Clamp Inox / Fixação Inox	Nº90	1			
3	-	Clamp DTC / Fixação DTC	Nº93A	1			
2	-	Clamp Inox / Fixação Inox	Nº117	1			
1	-	Special Screw for DTC / Paraf. Especial DTC	7 x 30	2			
Item Nº	Reference	Component	Description	Quant			

Assembly Sequence

English:

Attention – Follow the assembly instruction sequence has you can see in the photos. Apply Rubber Cap on the Inox Clamp, assembly Rubber Cap.

- **1st Photo:** DTC Engine protection part and kit of components.
- **2nd Photo:** Apply Item Nº3 (Clamp DTC) in the protection using Item Nº1 (Screw DTC) Apply Item Nº6 (Clip Inox) in Item Nº4 (Clamp Inox) after on the front of the bike.
- **3rd Photo:** Remove exhaust front attachment to the frame.
- **4th Photo:** Apply Item Nº6 (Clip Inox) in Item Nº2 (Clamp Inox) and after in the frame
- **5th Photo:** Mount Protection on the bike first front parte by passing between the frame of the bike and the exhaust. Adjust middle and rear clamps after placing them in position
- **6th Photo:** Reseat exhaust attachment as it was initially
- **7th Photo:** Apply front Screw (Item Nº5) in Camp Nº90 and adjust.
- **8th Photo:** Tight all screws .

DTC Engine Guard EC HUSQVARNA TE 250-300 2016 KTM XC 250-300 2016

