


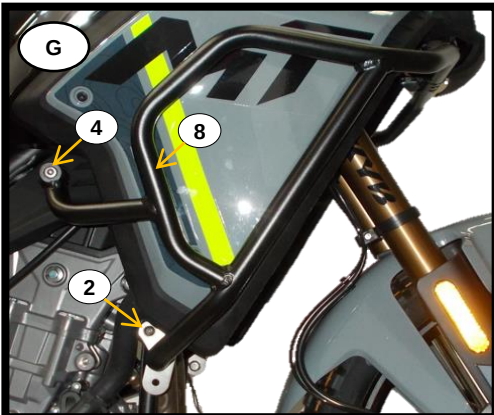

English:


- Assemble the assembly previously assembled on the motorcycle according to the photo.

Français:

- Assembler l'ensemble préalablement assemblé sur la moto conforme à la photo.

Português:

- Montar conjunto anteriormente montado de acordo com a foto.

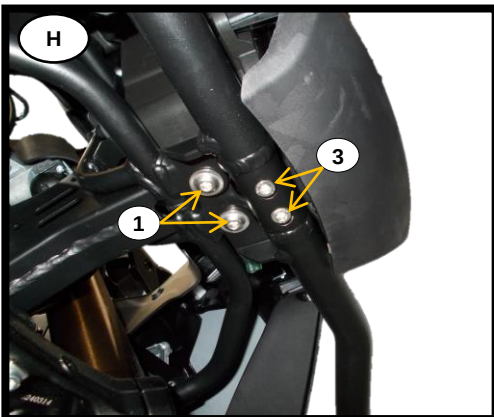

English:

- Apply items Nº1 (Screw – x2) and Nº3 (Screw – x2) on the motorcycle according to the photo.

Torque all screws to the correct value starting with unions.

Français:

- Appliquer les items Nº1 (Vis – x2) et Nº3 (Vis – x2) sur la moto conforme à la photo.

Torque toutes les vis avec le bonne valeur à commencer pas les unions.

Português:

- Aplicar os itens Nº1 (Parafuso – x2) e Nº3 (Parafuso – x2) na moto de acordo com a foto.

Apertar todos os parafusos com o valor correto de torque iniciando pelas uniões.



5/6mm



13mm



13mm



N.m	M4	M5	M6	M8	M10	M12
STEEL	8.8	2.7	5.5	9.7	23.0	47.0
STAINLESS STEEL	A2	2.6	5.1	8.7	21.2	42.0



ALUMINUM TRAIL CRASH BAR

Ref.: 2CP197U106



Assembly Booklet / Paper collection

Livret de montage / Collecte de papier



Mini Zip Bag / Plastic collection

Mini sac zip / Collecte de pastique



Box / Paper collection

Boîte / Collecte de papier



Carton Separator / Paper collection

Séparateur de cartons / Collecte de papier



Card Header / Paper collection

Carte d'en-tête / Collecte de papier



Plastic Bag Cover / Plastic collection


Couverte de sac en plastique / Collecte de plastique




8	Carenagem Superior Direita / Upper Right Crashbar	R106	1
7	Carenagem Superior Esquerda / Upper Left Crashbar	L106	1
6	Fixação Inox / Stainless Steel Clamp	189	2
5	Parafuso / Screw	M8x20 DIN6921 - A2	2
4	Parafuso / Screw	M8x90 DIN912 - A2	2
3	Parafuso / Screw	M6x16 DIN912 - A2	2
2	Parafuso com Falsa Anilha / Screw with Washer False	M8x20 ISO7380 - A2	2
1	Parafuso com Falsa Anilha / Screw with Washer False	M8x16 ISO7380 - A2	2
ITEM Nº:	COMPONENTE (COMPONENT):	DESCRIÇÃO (DESCRIPTION):	QUANT.:
ACESSÓRIOS (ACCESSORIES)			




ID.022.02

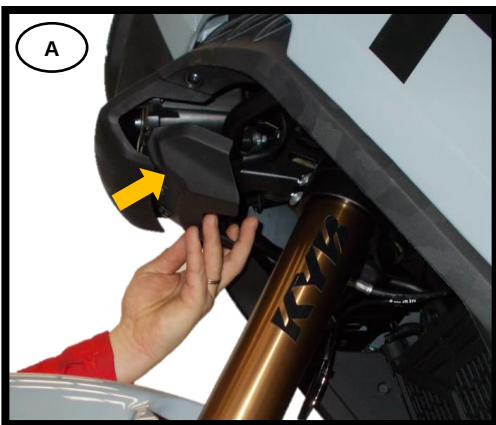


- English:**
- Remove OEM plastic.
- Français:**
- Retirer la plastique OEM.
- Português:**
- Remover plástico OEM.

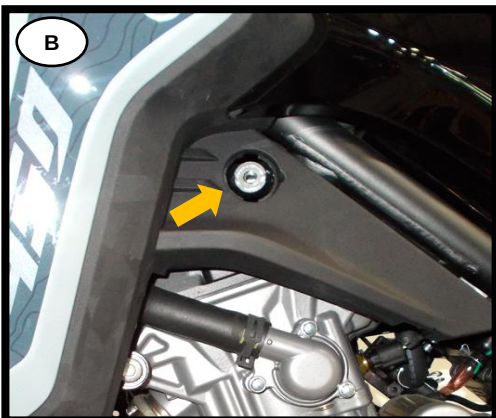


- English:**
- Remove the OEM plastic cover marked in the photo.
- Français:**
- Retirez le couvercle en plastique OEM marqué sur la photo.
- Português:**
- Remover tampa de plástico OEM marcado na foto.

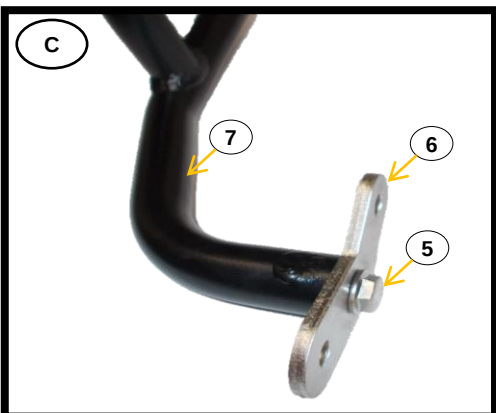

- English:**
- Apply item N°6 (Stainless Steel Clamp – x1) on the item N°7 (Upper Left Crash Bar – x1) with item N°5 (Screw – x1) according to the photo.
- **Attention:** Does not tighten the screw.
- Français:**
- Appliquer l'item N°6 (Fixation Inox – x1) sur l'item N°7 (Crash Bar Gauche Supérieure – x1) avec l'item N°5 (Vis – x1) conforme à la photo.
- **Attention:** Ne serre pas la vis.
- Português:**
- Aplicar o item N°6 (Fixação Inox – x1) no item N°7 (Carenagem Superior Esquerda – x1) com o item N°5 (Parafuso – x1) de acordo com a foto.
- **Atenção:** Não dar aperto ao parafuso.

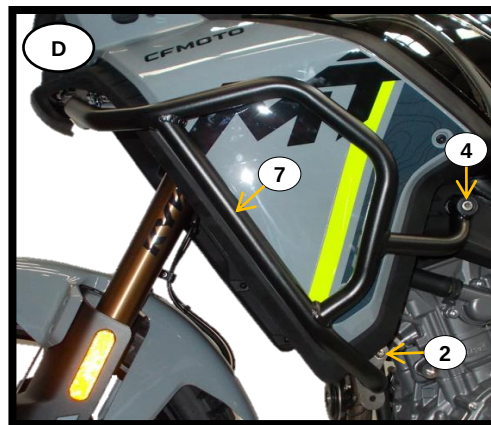

- English:**
- Assemble the assembly previously assembled on the motorcycle according to the photo.
- Français:**
- Assembler l'ensemble préalablement assemblé sur la moto conforme à la photo.
- Português:**
- Montar conjunto anteriormente montado de acordo com a foto.

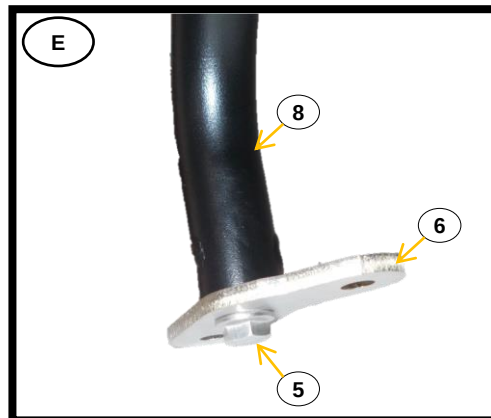

- English:**
- Apply item N°6 (Stainless Steel Clamp – x1) on the item N°8 (Upper Right Crash Bar – x1) with item N°5 (Screw – x1) according to the photo.
- **Attention:** Does not tighten the screw.
- Français:**
- Appliquer l'item N°6 (Fixation Inox – x1) sur l'item N°8 (Crash Bar Droit Supérieure – x1) avec l'item N°5 (Vis – x1) conforme à la photo.
- **Attention:** Ne serre pas la vis.
- Português:**
- Aplicar o item N°6 (Fixação Inox – x1) no item N°8 (Carenagem Superior Direita – x1) com o item N°5 (Parafuso – x1) de acordo com a foto.
- **Atenção:** Não dar aperto ao parafuso.



- English:**
- Remove the OEM plastic cover marked in the photo.
- Français:**
- Retirez le couvercle en plastique OEM marqué sur la photo.
- Português:**
- Remover tampa de plástico OEM marcado na foto.